

## KPC650 activation in MB6000

KPC650 can be activated in MB6000. There is a PRL (Preferred Roaming List) record in KPC650 card. The PRL contains the latest addition of EVDO sites so that the card can see the new EVDO base stations and roam to these new sites. The EVDO Operator may build new EVDO sites from time to time. So the PRL should be updated from time to time . This way, you can always use the best service provided by the Operator. This PRL can be updated by MB6000 with the activation function provided by MB6000.

If it is the first time when you use a KPC650 data card, you also need to activate it to download the latest PRL.

### How to activate KPC650 in MB6000

1. Go to the Web GUI->Interfaces->Internet Access. In the Networking domain, change the **connect mode** to **Manual**, then reboot the system to make this change become effective. This way, MB6800 will not start to dial-up when startup.

Networking	
<b>Connect mode</b>	<div style="border: 1px solid #ccc; padding: 5px;">           Auto <span style="float: right;">▼</span> </div> <ul style="list-style-type: none"> <li>Auto: Automatically dial up when power up.</li> <li>Dial on-demand: Dial up when LAN data request to access Internet.</li> <li>Manual: Manually dial up by client software or from web page.(see the <a href="#">Status:Interface page</a>)</li> </ul>
<b>Keepalive</b>	<input checked="" type="checkbox"/> Enable keepalive Interval with <input type="text" value="15"/> seconds Reset Modem After redialing <input type="text" value="3"/> times. Reboot System After resetting modem <input type="text" value="3"/> times.


2. After reboot, Go to the Web GUI->Interfaces->Internet Access:

**Interfaces: Internet access**

**Enable this interface**

Hardware					
<b>Name:</b>	Kyocera KPC650 Card <input type="button" value="Download PRL"/>				
<b>Manufactory:</b>	Kyocera Wireless Corp.				
<b>Product:</b>	Model Catalina				
<b>SW:</b>	CG1.0.04 1 [Jan 05 2005 15:25:31]				
<b>Singal strength:</b>	Good (31) <b>Hint:</b> Good:31-24,Normal:23-16,Poor:15-8,Bad:7-1,Invalid:0				
<b>PIN:</b>	<input checked="" type="checkbox"/> Automatically authenticate with the saved pincode when device startup.				
<b>Modem:</b>	<table border="1"> <tr> <td>Phone number</td> <td><input type="text" value="#777"/></td> </tr> <tr> <td>Init string</td> <td><input type="text"/></td> </tr> </table>	Phone number	<input type="text" value="#777"/>	Init string	<input type="text"/>
Phone number	<input type="text" value="#777"/>				
Init string	<input type="text"/>				

3. Click “download PRL” button on the Internet access page. The following page will pop-up.

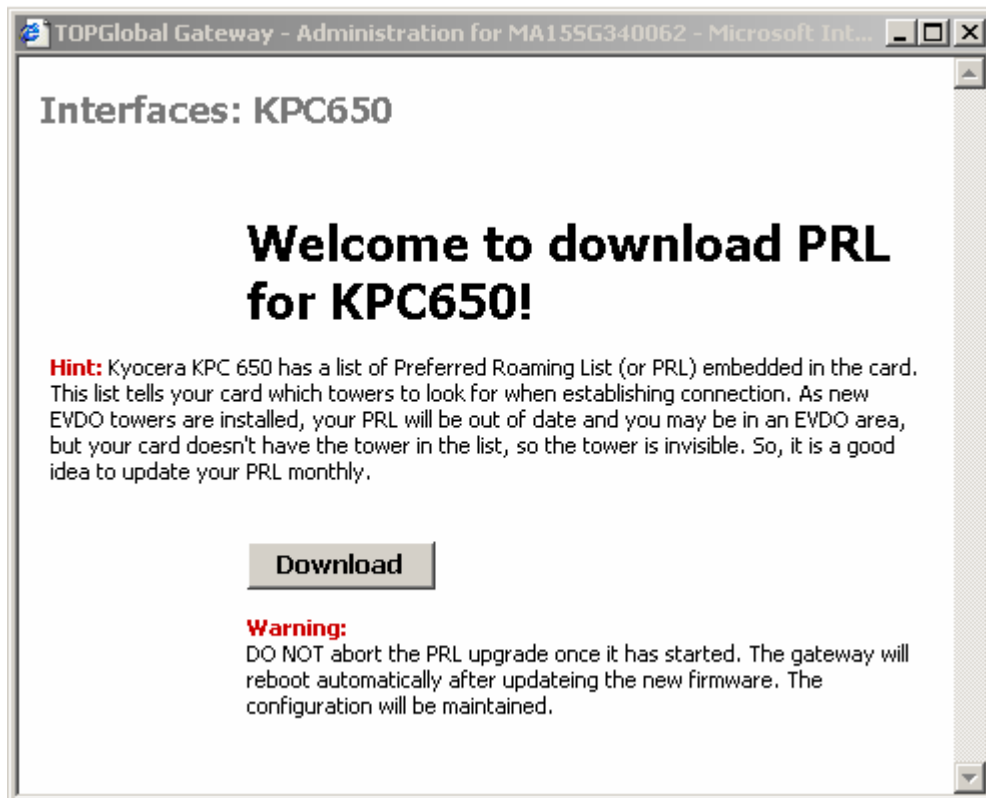

4. Click “download” button on the Internet access page. There will be a result page return to show whether this process is success or failure.
5. Reboot the MB6800 if it has download PRL successfully.



**TOP Global Technology Ltd.**

ADDR: 4605 Barranca Parkway Suite 101G

Irvine, CA 92604

TEL: +1-949-586-7046

FAX: +1-949-586-8299

<http://www.topglobalusa.com/>

---