

Configure MB6000 for Cingular networks

1. Go to the Web GUI of MB6000 (3G Phoebus)->interface->Internet access:

Interfaces: Internet access

Enable this interface Check this box

Interface type	Wireless Internet access
Connect mode	Auto <ul style="list-style-type: none"> Auto: Automatically dial up when power up. Dial on-demand: Dial up when LAN data request to access Internet. Manual: Manually dial up by client software or from web page.(see the Status:Interface page)
DNS	<input checked="" type="checkbox"/> Obtain DNS server address automatically DNS Server: 221.130.33.60 221.130.33.52
Keepalive	<input checked="" type="checkbox"/> Enable keepalive 5 seconds
Username	ISP@CINGULARGPRS.COM
Password	CINGULAR1
Hardware	Card model: Sierra Wireless AirCard 750 Singal strength: Invaid (0) Hint: Good:31-24,Normal:23-16,Poor:15-8,Bad:7-1,Invalid:0 PIN: <input checked="" type="checkbox"/> Automatically authenticate with the saved pincode when device startup Modem: <input type="checkbox"/> Customize Check this box <input type="button" value="Submit"/>

2. Check the check box of “Enable this interface” to enable the 3G Data card, input the Username and Password correctly as below:

- Username: ISP@CINGULARGPRS.COM
- Password: CINGULAR1

3. Check the check box of “Customize Modem” to configure the dial up parameter of the Cingular as below:

Modem: Customize

Phone number	*99***1#
CID	1
PDP Type	IP
APN	isp.cingular
PDP Address	0.0.0.0
Data Compress	0
Header Compress	0

4. Make sure you have correctly input the parameters as below:

- Dial number: *99***1#

-
- APN: isp.cingular
5. Leave all the other parameters as the default value then submit the configurations.
 6. Follow the instruction to reboot the MB6000 then MB6000 will dial up automatically.