



1. Get the latest MB6000 firmware from [Top Global](#) or support@topglobalusa.com. Rename the firmware to **firmware.bin** and put it in a folder, for example, C:\firmware.
If the firmware you get from Top Global is a .zip file, please don't forget to extract it.
2. Download TFTP server [3cdv2r10.zip](#)(Click to download) from the Internet. And install this software to your PC/Laptop.
3. Change your PC/Laptop's IP address to **172.16.0.2**.
4. Run the TFTP server and click the "Configure TFTP Server".

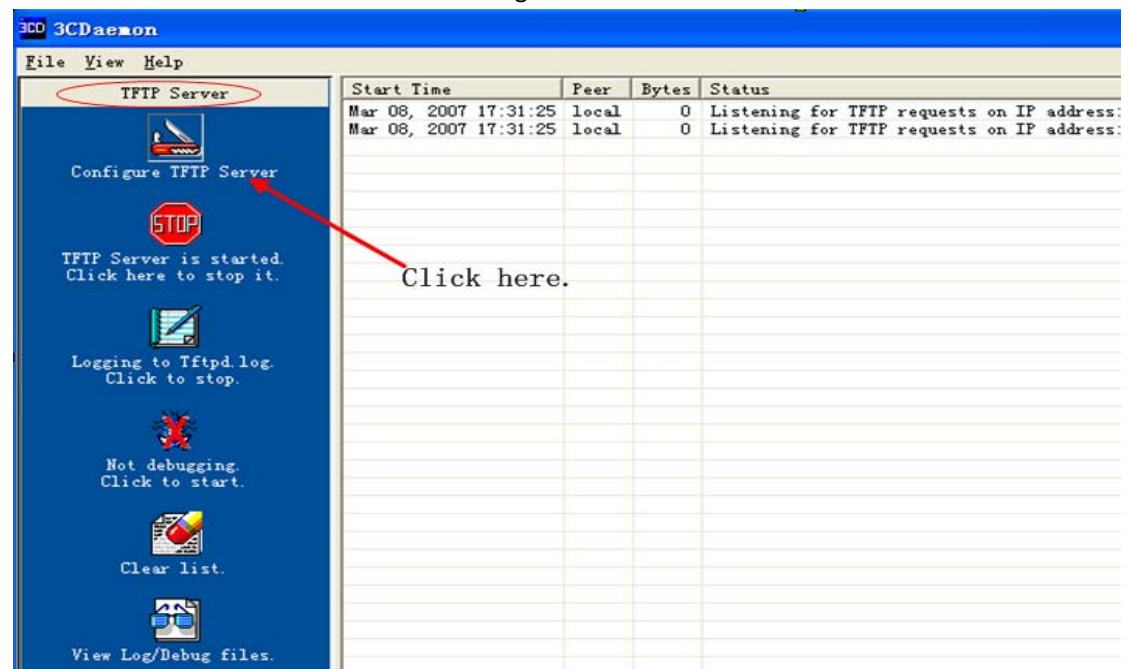

5. And then input the path where you put the firmware in "Upload/Download" field.

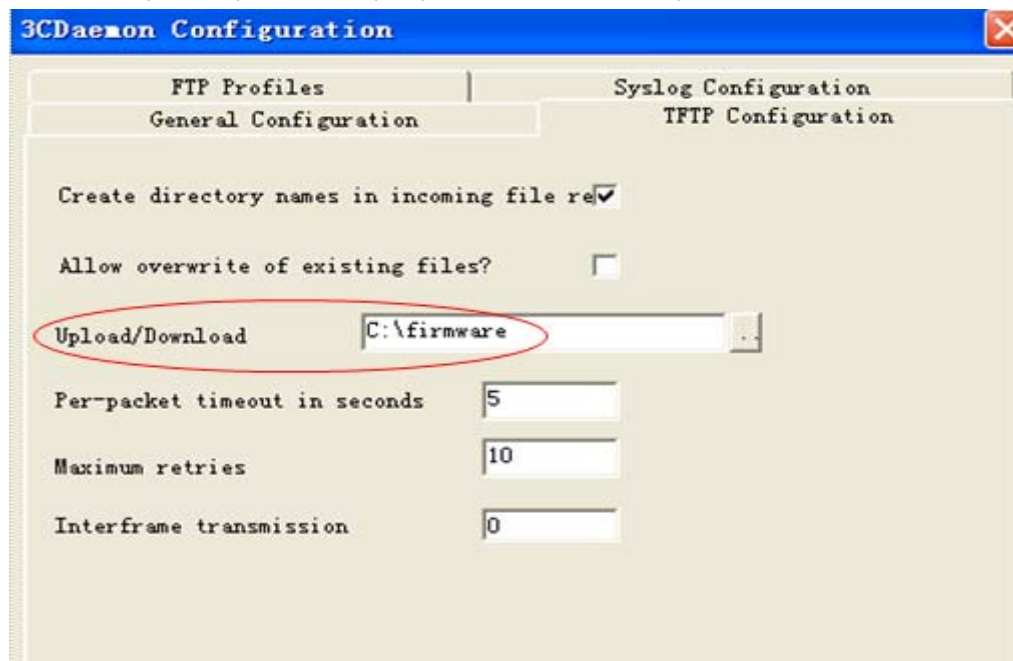

6. Click "OK" to save.
7. Follow the instruction in "How to Force Reload MB6000.pdf" to finish the whole procedure.